

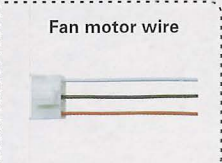
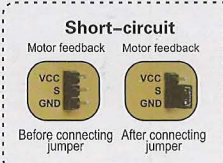


AR-QD08PGC+ ★ motor wire and plug-in start capacitor enclosed


⚠️ If you install it in inverter air conditioner, please don't connect our output of the compressor relay to the inverter compressor.

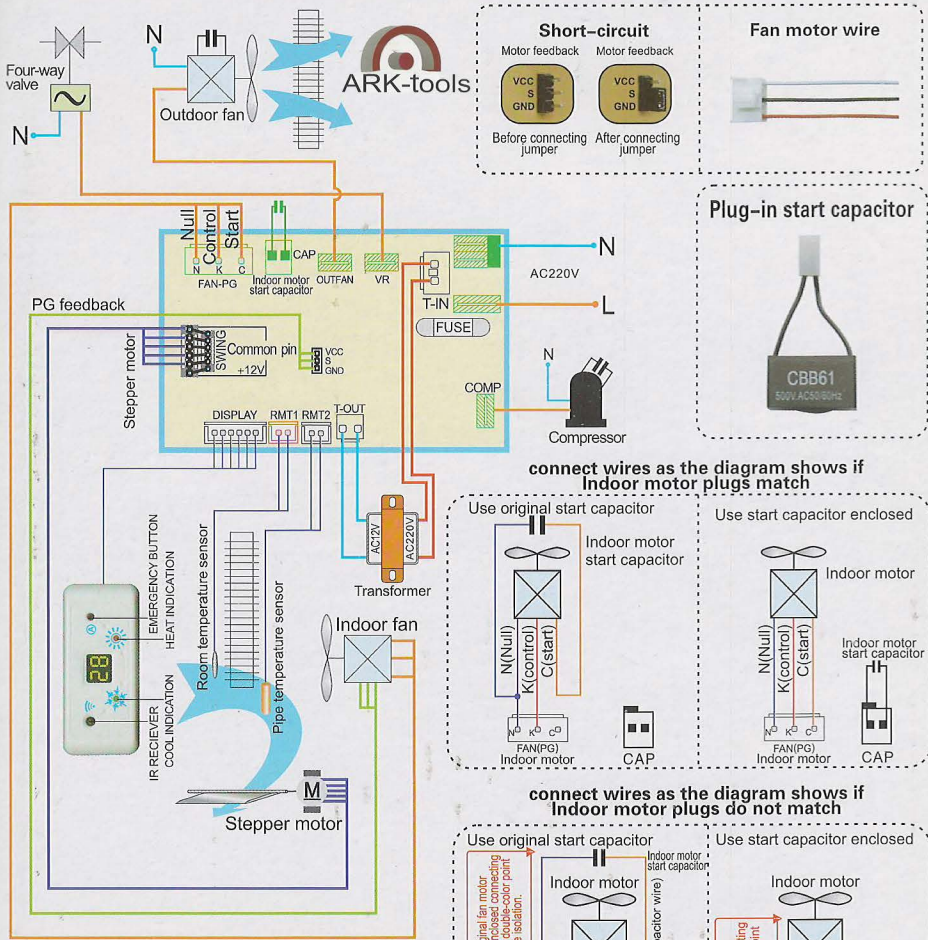

connect wires as the diagram shows if Indoor motor plugs match

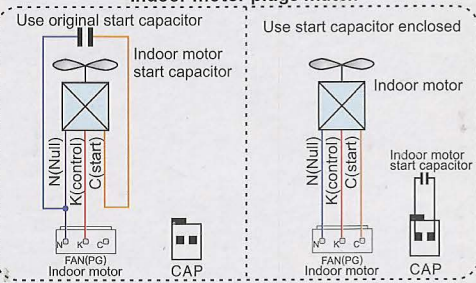

connect wires as the diagram shows if Indoor motor plugs do not match

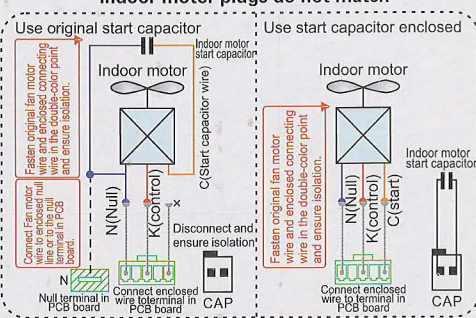

- 1.If PG motor doesn't work, change connection of lines according to the diagram.
- 2.If there is no Hall effect of the air conditioner PG motor, or Hall effect is broken, please short circuit signal pole and negative pole.

⚠️ Before electrifying, please make sure the connection is strictly according to the interface function described in the manual, and ensure its connection is stable and reliable.